 
 


Assembly Guide

 
Showalot mini

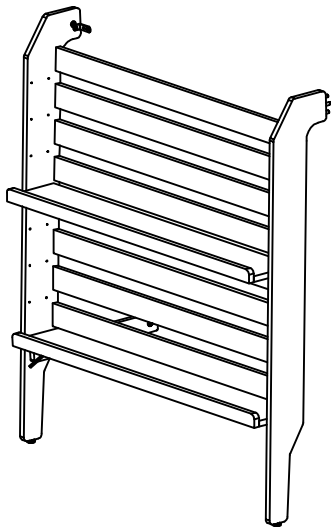

E4470 / E4471
Wall model

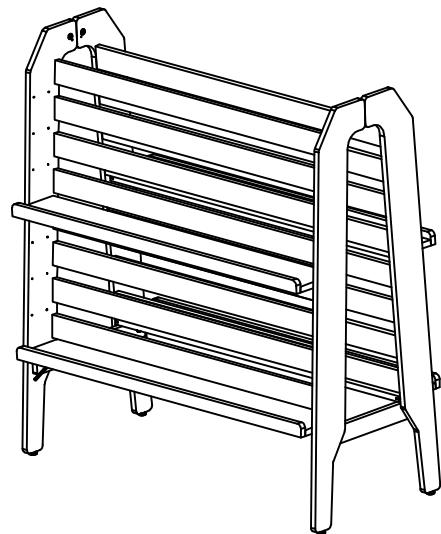

E4521 / E4522
Freestanding
model

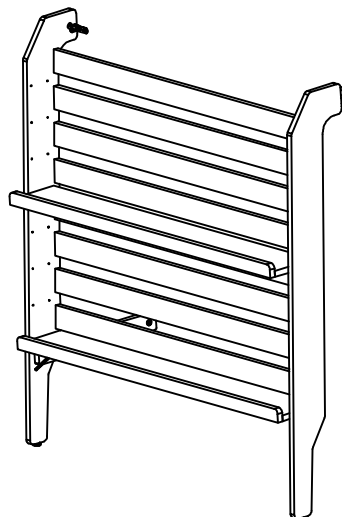


E4523 / E4524
Freestanding
model

2018.05


First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

 Not used in **E4521 / E4522**
Freestanding

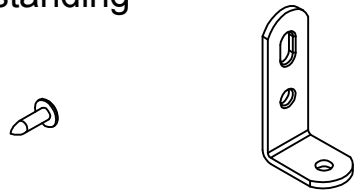

2 x F
E9900027

 2 x E
E40425

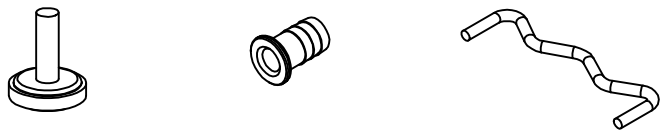


2 x A
E40416

2 x B
E40418
(assembled by supplier)

4 x C
E40431

 Not used in **E4470 / E4471** Wall model

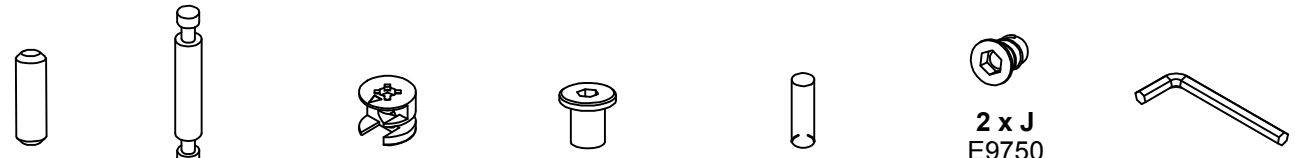

2 x D
E40415

1 x G
E9900024

1 x H
E9900025

 
2 x I
E404110

2 x O
E9900031


2 x J
E9750
(assembled by supplier)

1 x N
E448502


Not used in **E4470 / E4471**
Wall model



1 x L
E9950066

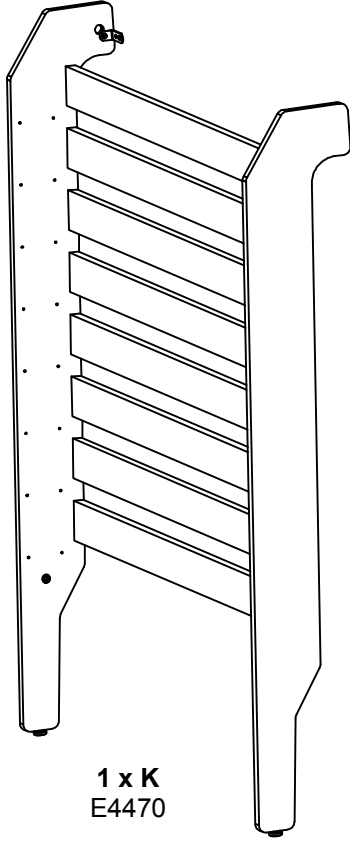 


1 x K
E4470

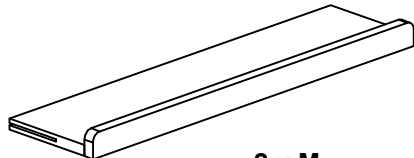 

2 x M
E44662

 E4472 / E4473 Desk Plate for Readalot
Not used in **E4470 / E4471 / 4521 / E4522**

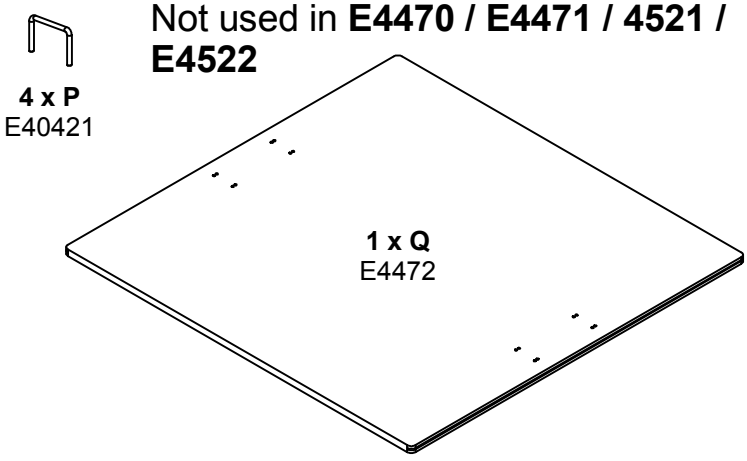


4 x P
E40421

1 x Q
E4472

Assembly Guide


E4470 / E4471

 
Showalot mini

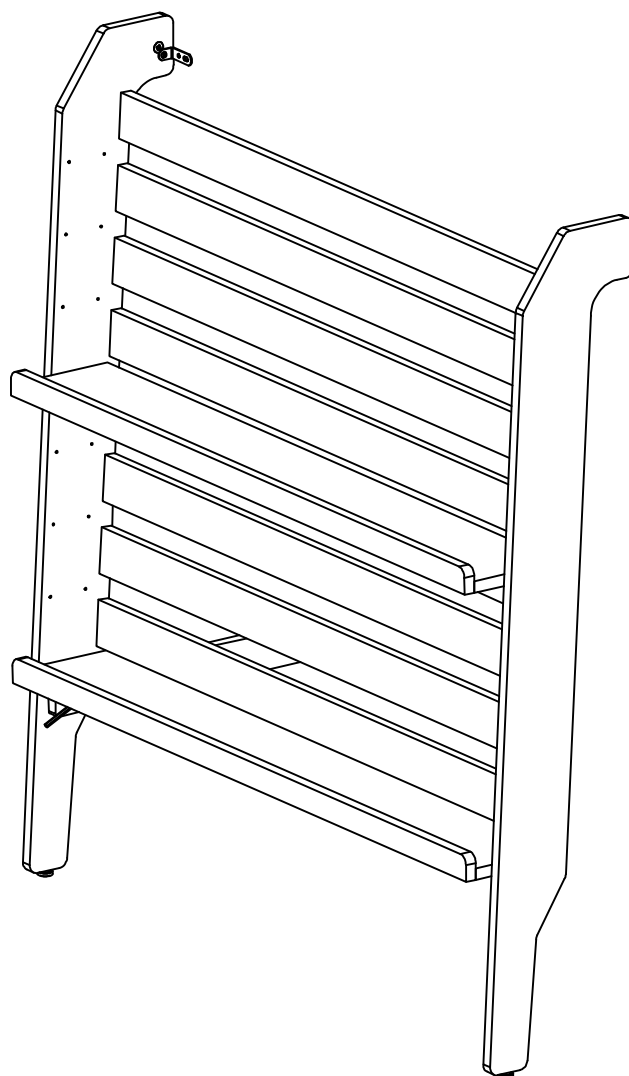

2018.02

  First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

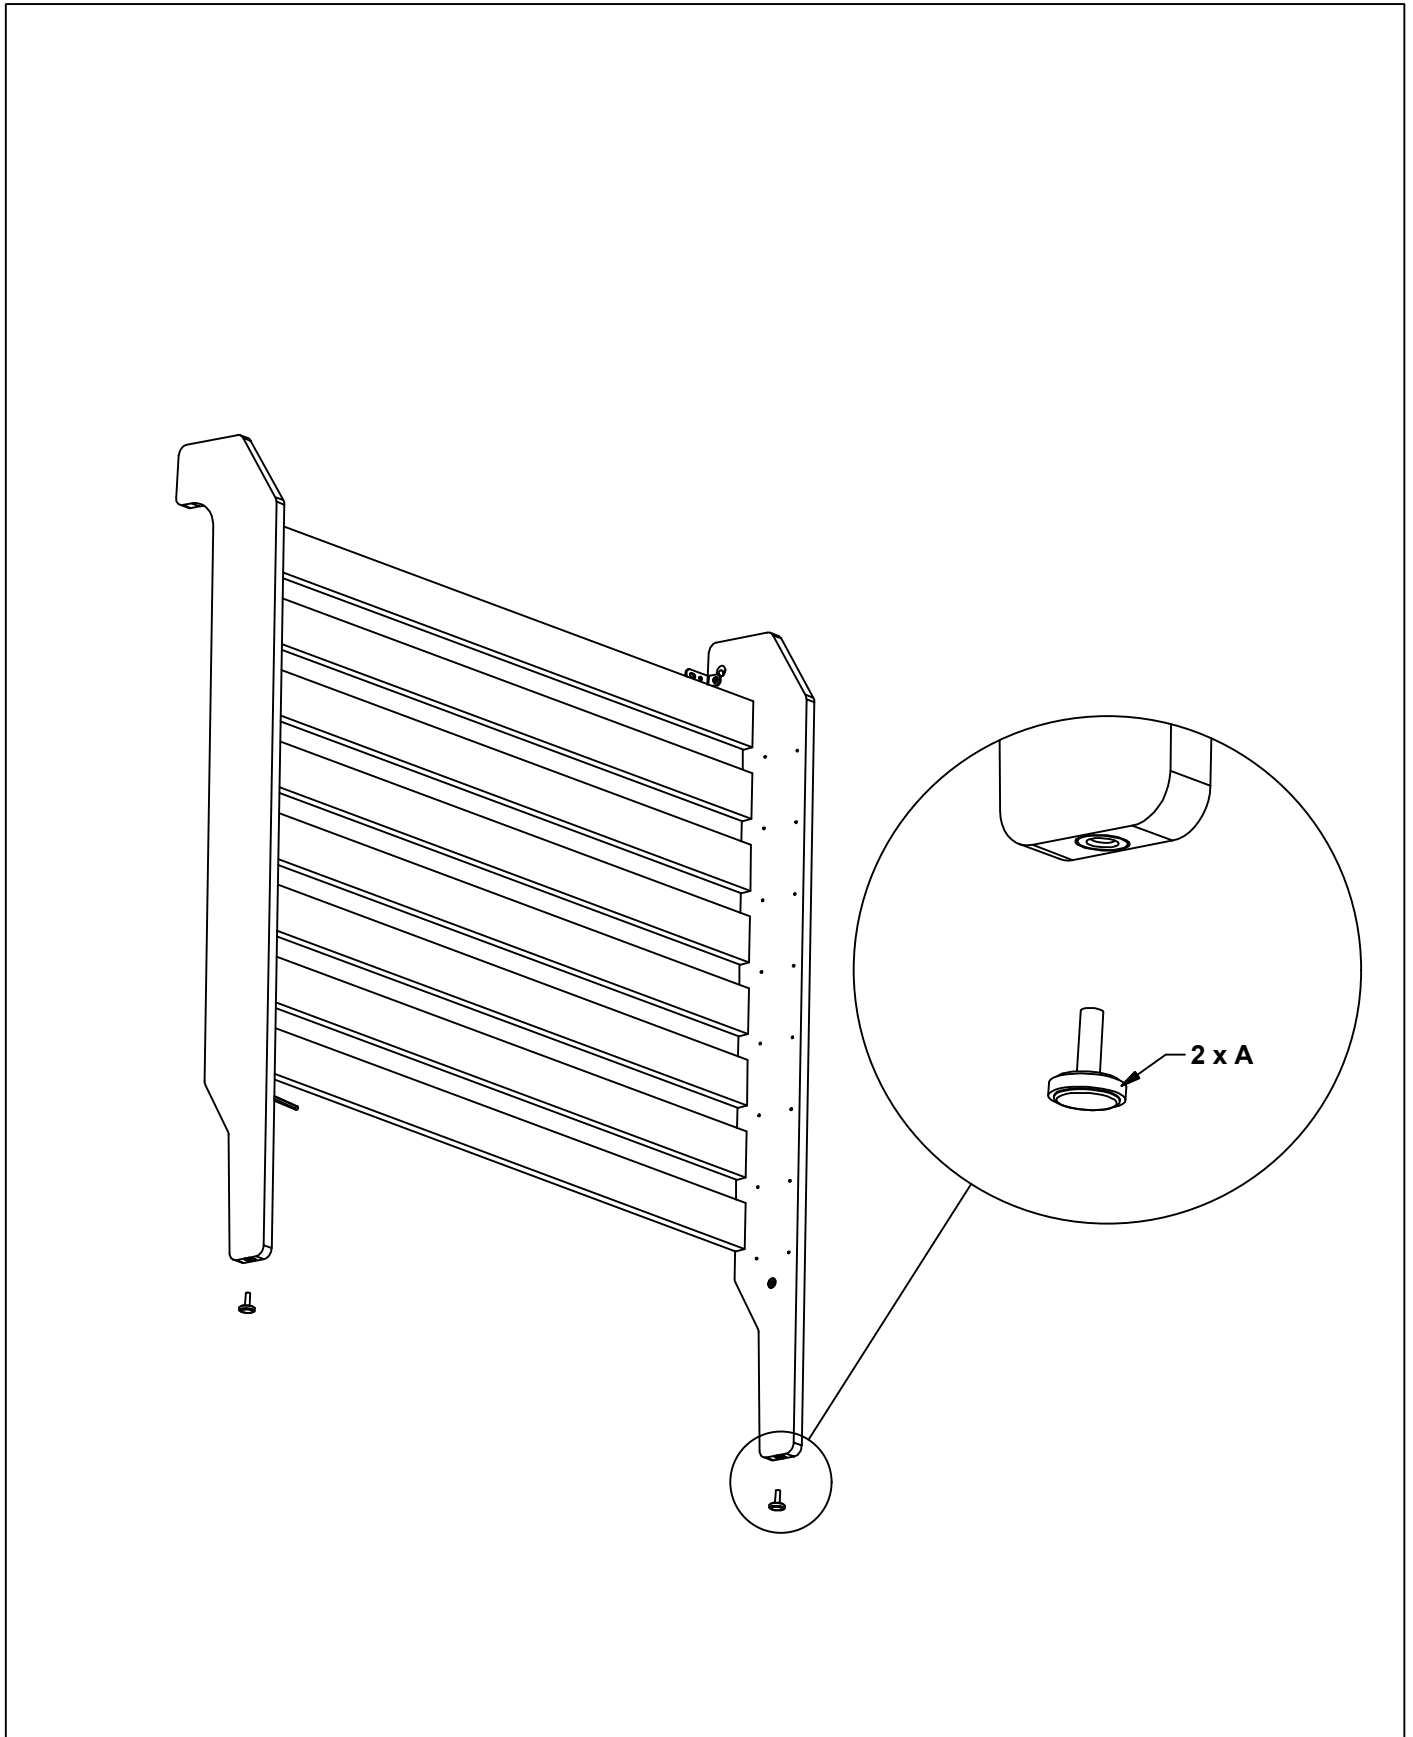


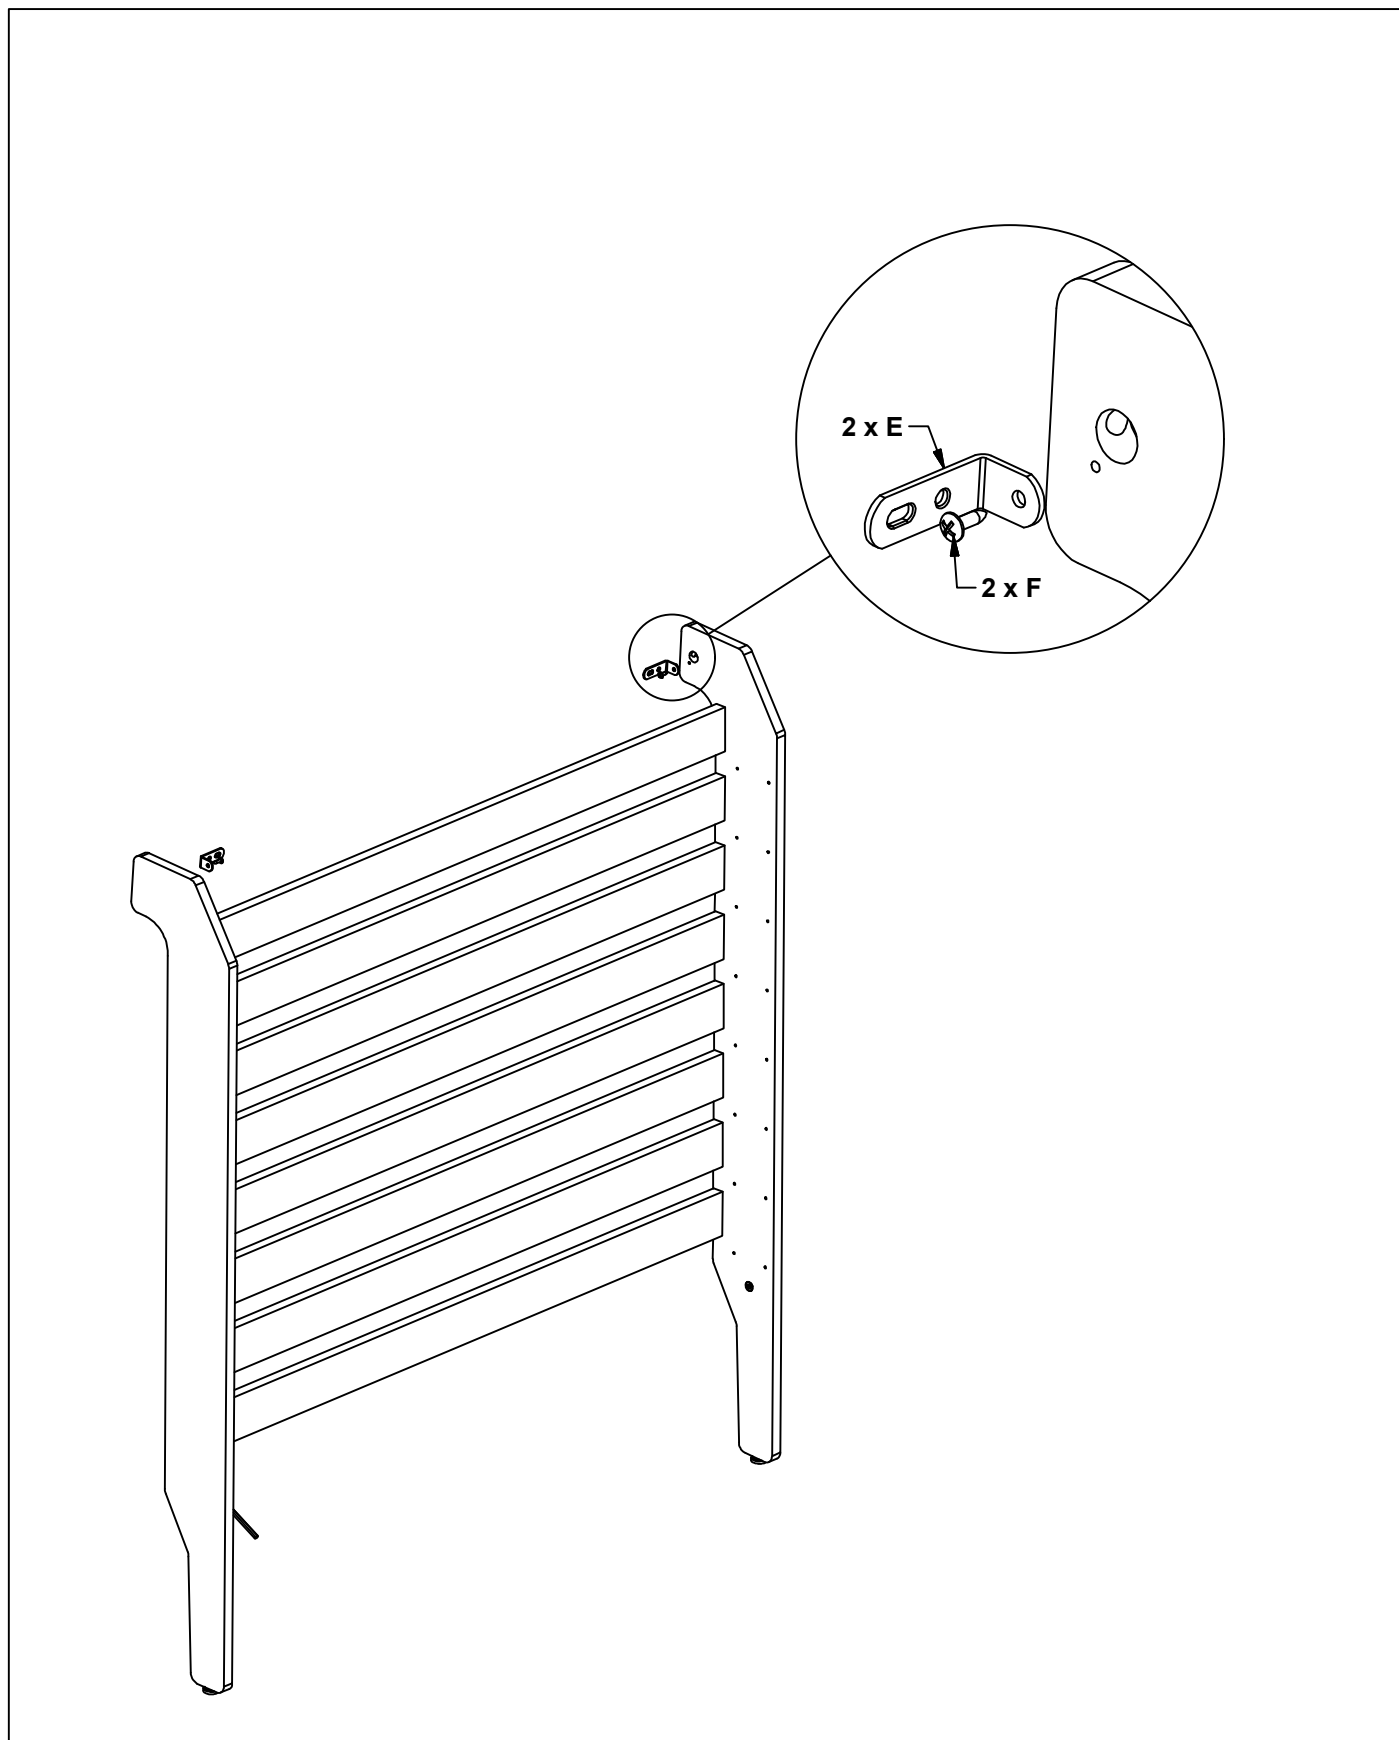

Assembly Guide


E4521 / E4522


 
Showalot mini

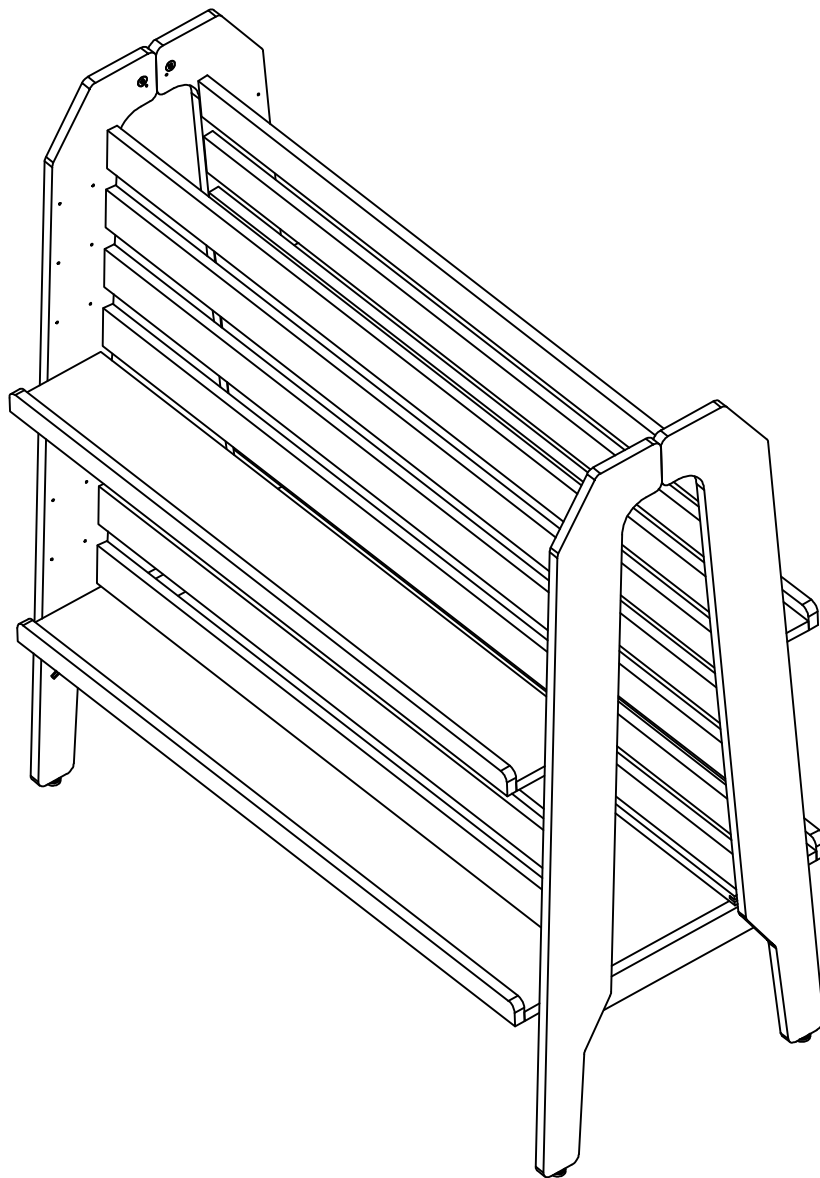


2018.05

    First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

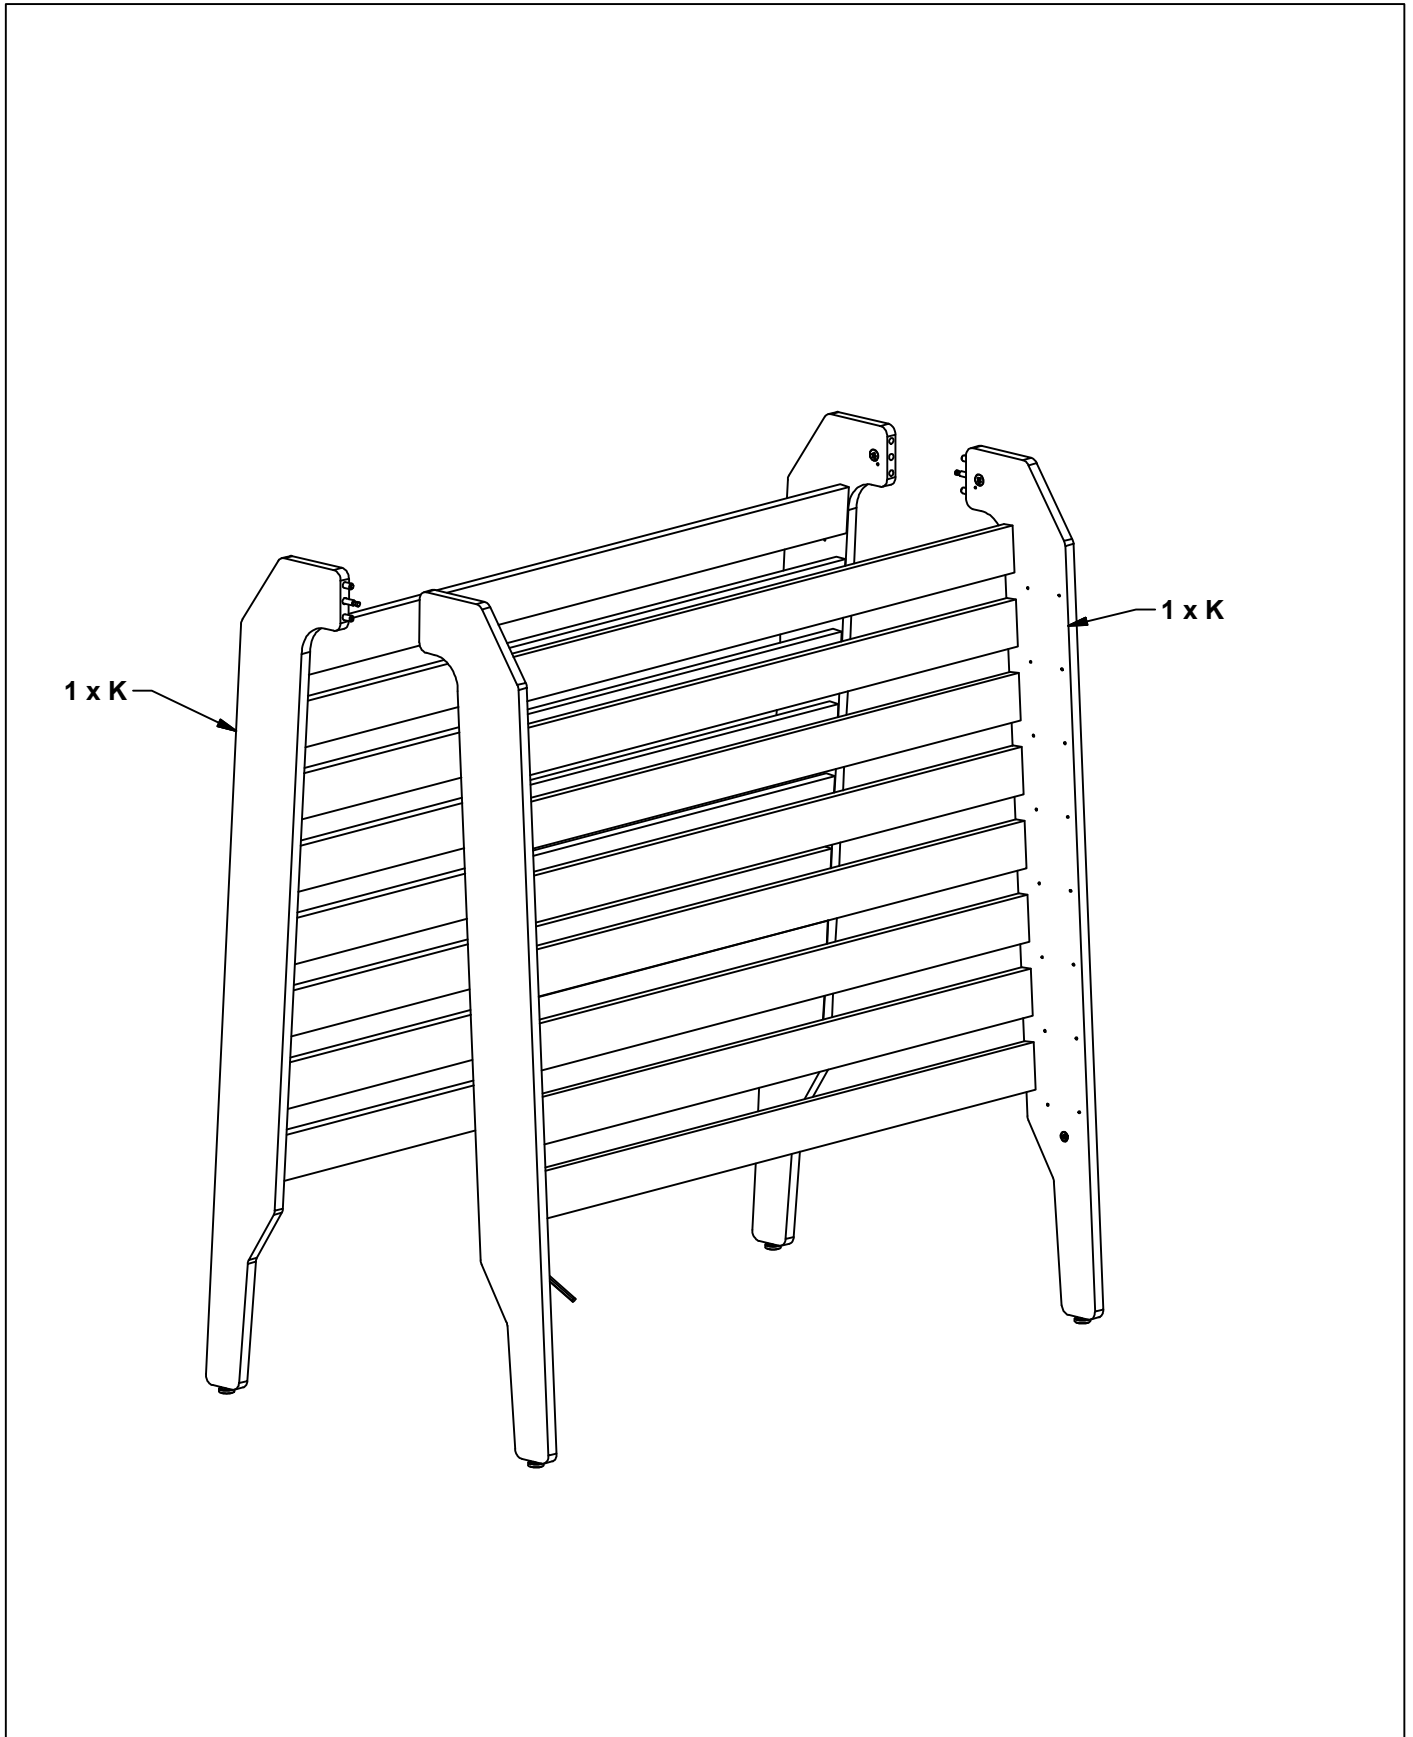

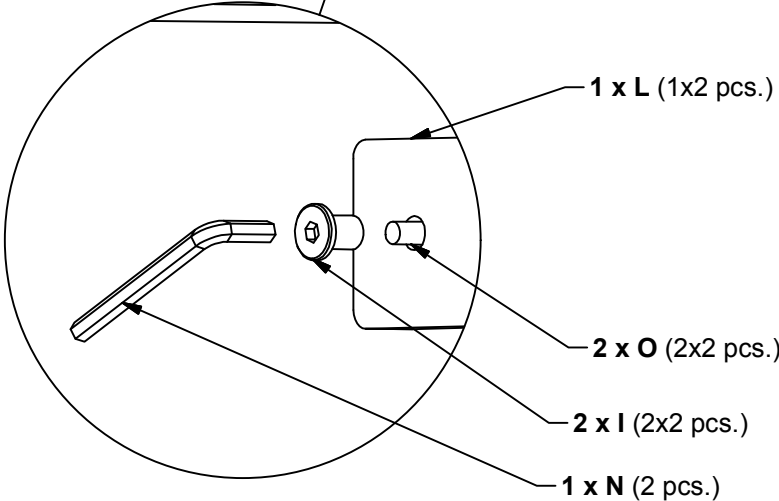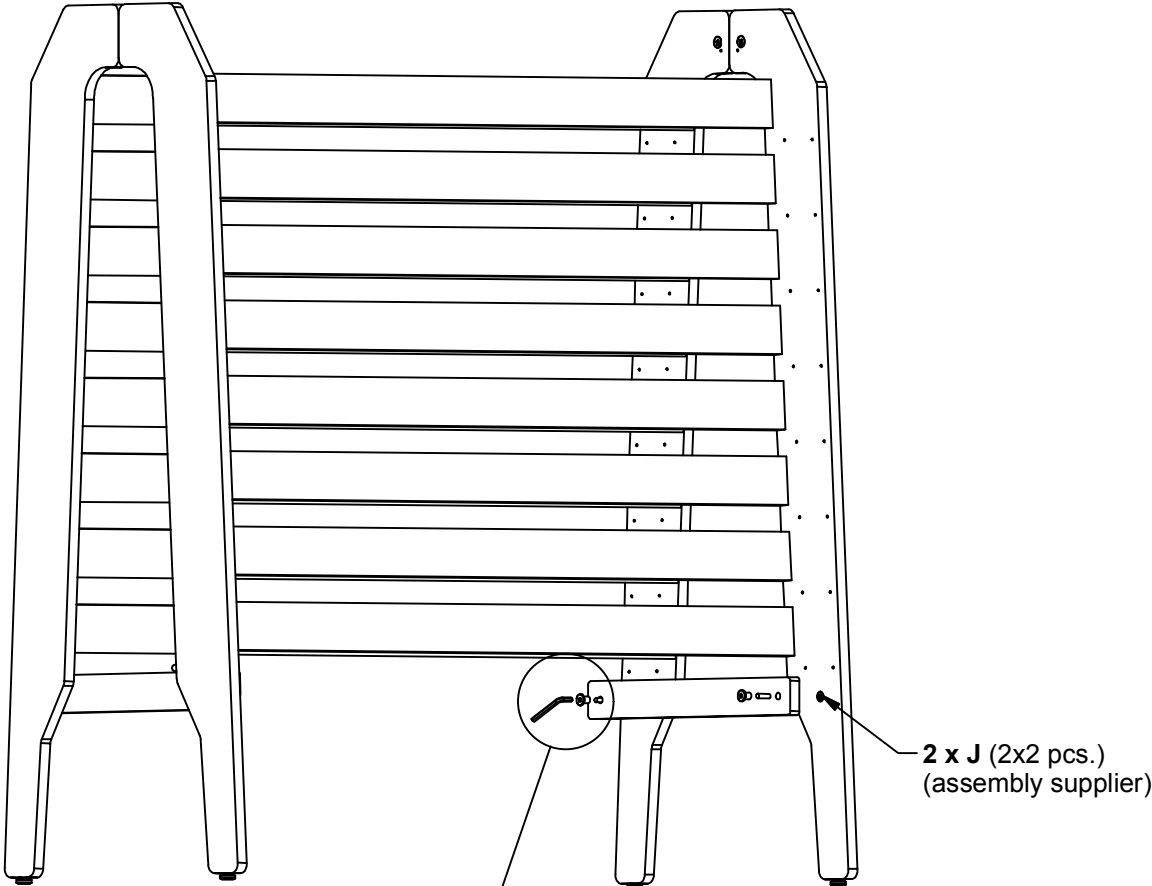


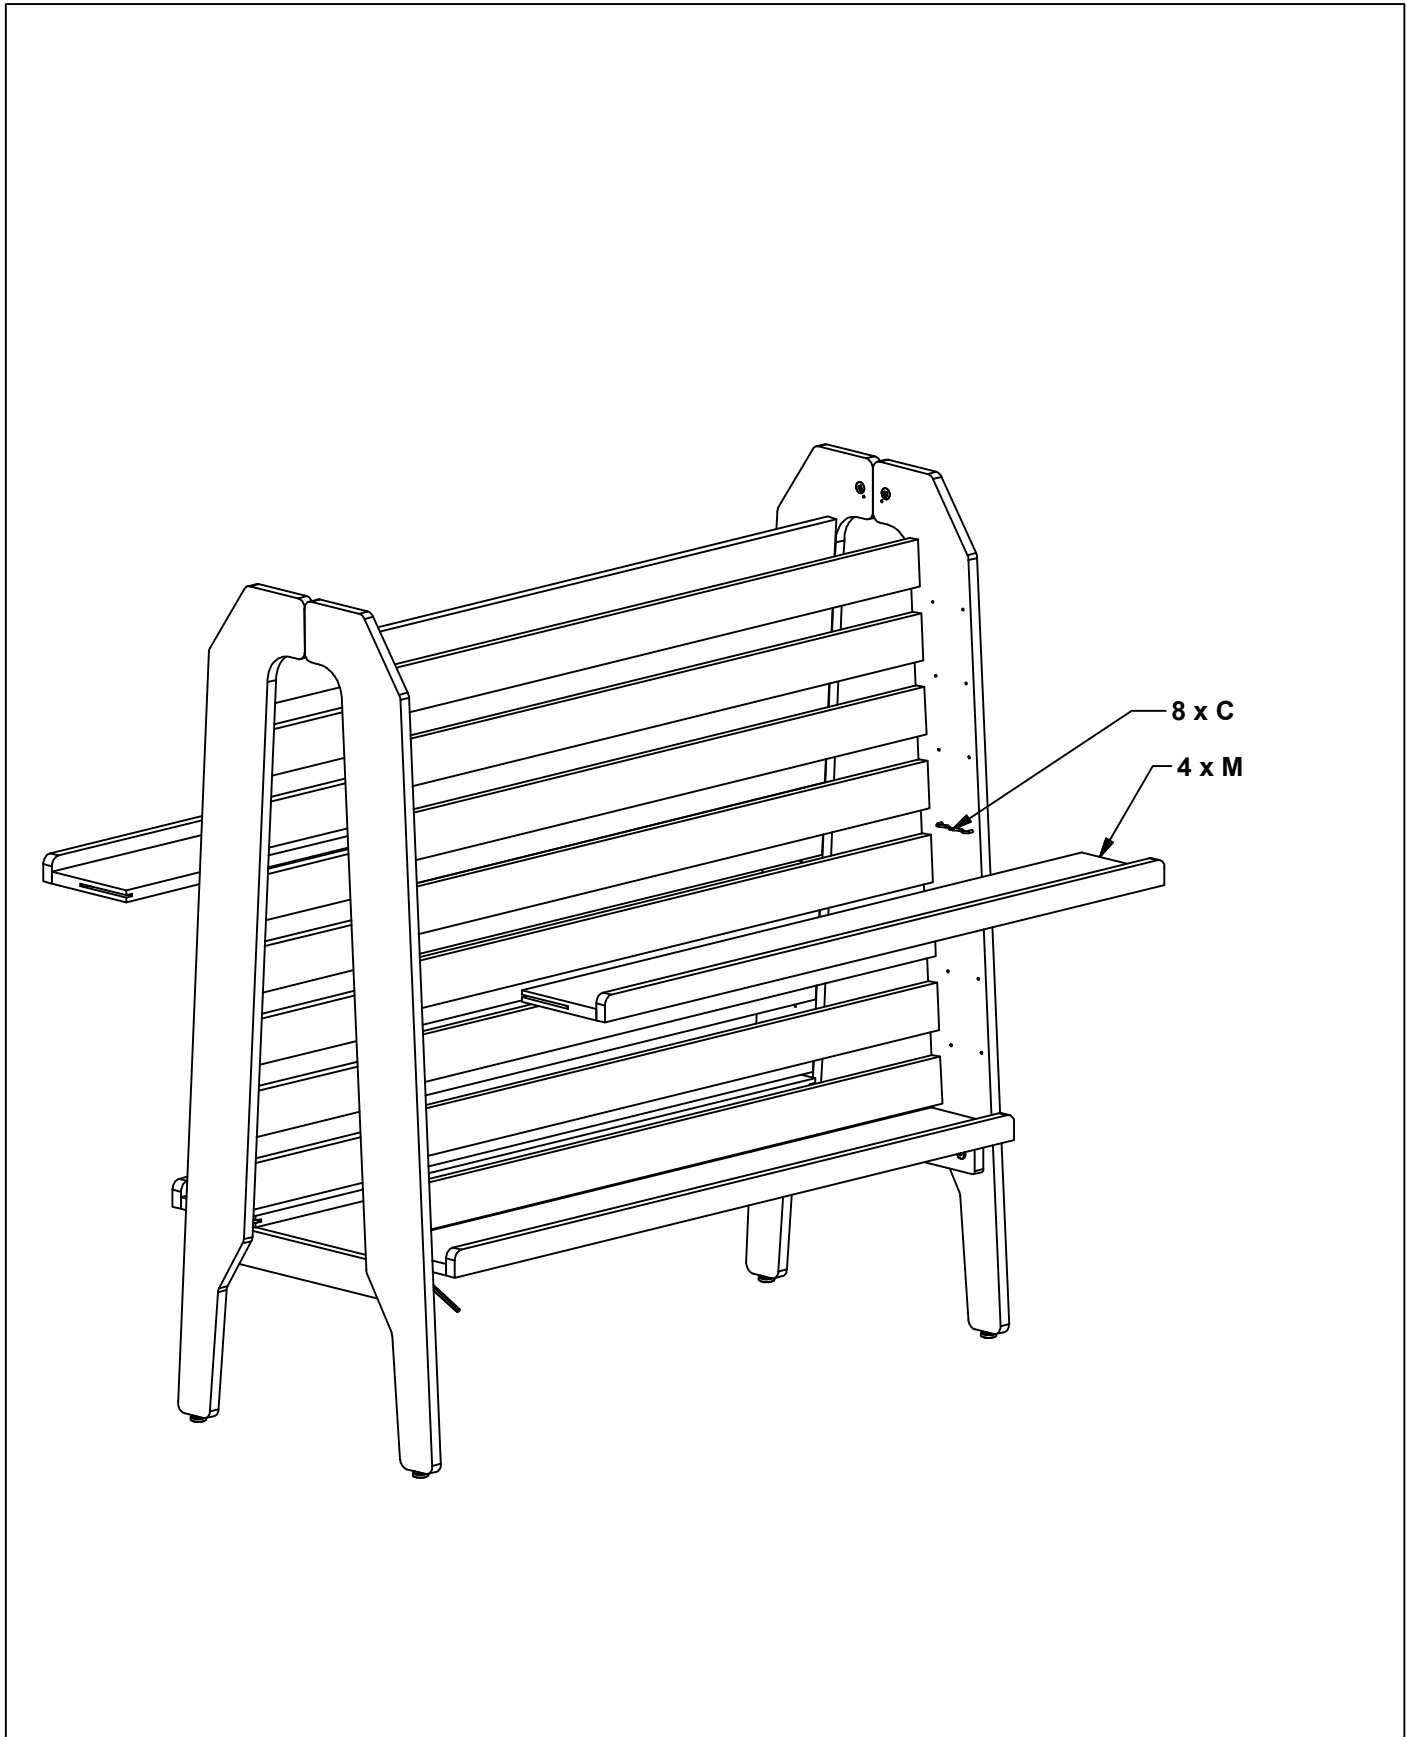

Assembly Guide

E4523 / E4524

 Readalot

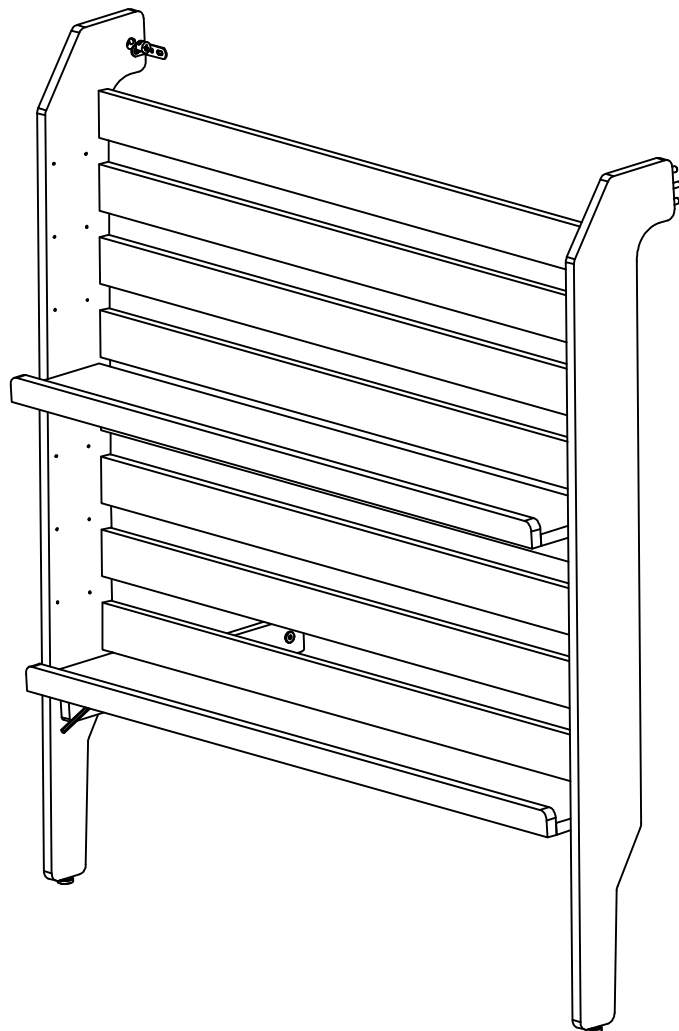

2018.02

First check the contents to make sure that nothing is missing. Sort out the screws and fittings as shown.
Assemble your furniture step by step, as shown in the illustrations.

